



# Safety notice: 50 mm chest harness

## Models and batches affected:

This advisory notice applies only to the following Palm Equipment Rescue PFDs made since 2018:



10392 Rescue 850




11621 Rescue 800



12355 Rescue Universal



12135 Rescue Extrem

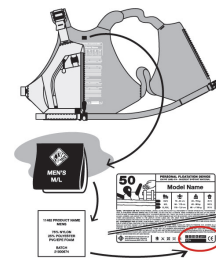

Year of manufacture

## Issue:

An intermittent manufacturing fault has been discovered on some 50 mm chest harness quick release (QR) buckles.

On affected models the QR buckle will not fully clamp shut causing the buckle to spring up, which could allow slippage to occur under load.



 Buckle springs out when compressed

## Action:

Please check your PFD for correct closure.

If you discover the QR buckle is not closing correctly please contact:

E: [customerservices@palmequipmenteurope.com](mailto:customerservices@palmequipmenteurope.com)

T: +44 (0) 1275 798 100

Palm Equipment will issue a replacement component and instructions on fitting.