

The Croll Strap allows the Petzl Croll to be used in conjunction with the Petzl C64 Chester and Petzl C81000 Top chest harnesses. For sit harness and chest harness compatibility refer to the table overleaf.

This product can also be used with the following Petzl full body harnesses - C71 Navaho Complet, C71F Navaho Complet FAST, C71000 Navaho Bod and C710F0 Navaho Bod FAST – see addendum for further information.

Please read the following information carefully before use.

Inspection and important points:

The chest harness **MUST** be attached to the sit harness as shown in the Petzl instructions that accompany the chest harness. **NEVER** use the chest harness without it being attached correctly to the sit harness.

Check that the Croll, chest harness and any lanyards attached to the chest harness operate correctly.

The **Croll Strap** must **NEVER** be used to attach the chest harness directly to the sit harness. The **Croll Strap** is **ONLY** designed to hold the Croll upright. It is not PPE.

Instructions for use:

Use a PPE Maillon Rapide (10 mm semi circular or 10 mm delta) to attach the Croll to the sit harness, positioned as shown. It is preferable to have the Maillon Rapide sitting behind the main attachment point of the sit harness. Check the Maillon Rapide is securely fastened (refer to manufacturer's instructions for use).

Place the tail of the **Croll Strap** through the narrow gap at the sternal attachment point of the chest harness so that the **Croll Strap** buckle is closest to the body.

Pass the tail of the webbing through the sternal attachment and through the top hole of the Croll from the front.

Take the tail up and pass it back through the sternal attachment and through the narrow gap of the chest harness and feed into the buckle.

Adjust the Croll strap length as required.

The Croll strap must then be doubled back through the buckle to prevent any slippage.

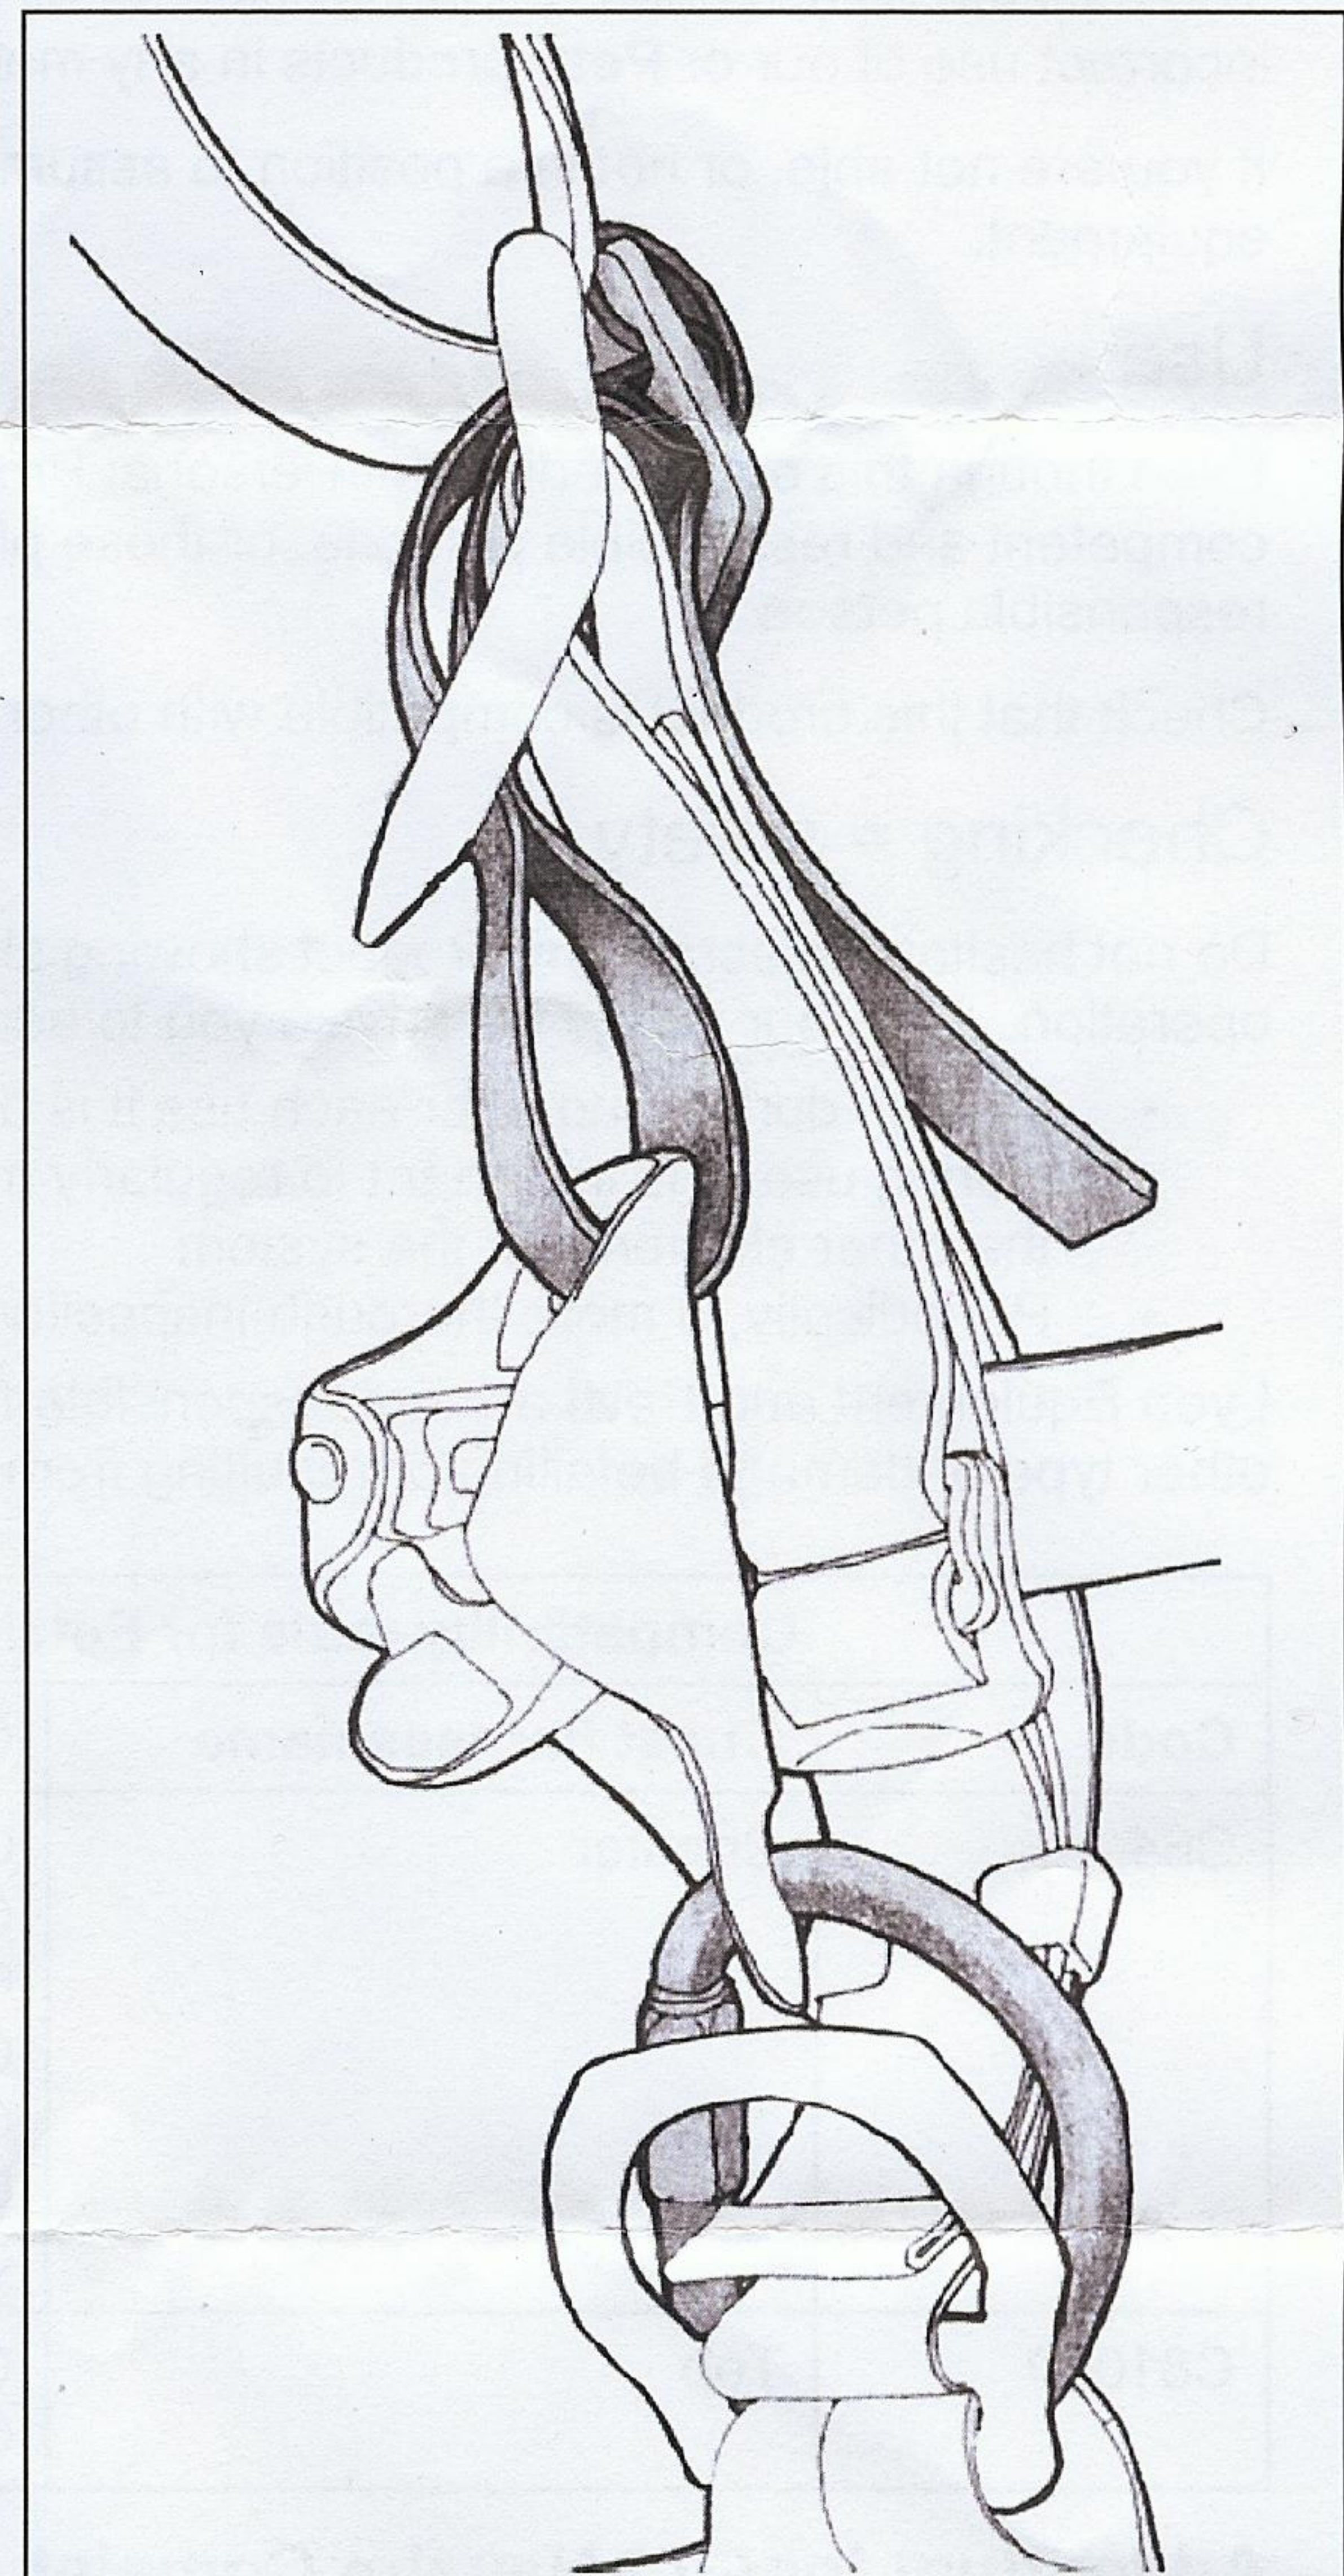


Diagram showing typical arrangement with Chester chest harness.



Document No.	LPI 018	
Issue No.	3	
Revision No.	0	
Issued by:	D Ellis	
Approved by:	P Witheridge	
Date.	15/10/07	Page 1 of 2

Lyon Equipment Ltd
 Dent
 Sedbergh
 Cumbria
 LA10 5QL
 Tel: +44 (0) 15396 25493
 Fax: +44 (0) 15396 25454
 Email: info@lyon.co.uk